Installation Instructions

Split Panel Bottom-Only 2-Pack Kit

Kit Types Available: (Each kit sold separately)

Full Panel 2-Pack Kit
Includes 2 full 49”W x 97”H fiberglass acoustic wall panels covered in choice of fabric, railing system components, installation roller and instruction manual.

Split Panel Bottom-Only 2-Pack Kit
Includes 2 split 49”W x 32”H fiberglass acoustic wall panels covered in choice of fabric, railing system components, installation roller and instruction manual. ***This kit must be combined with the Split Panel Top-Only 2-Pack Kit to make a full 98”W x 97”H wall section.***

Split Panel Top-Only 2-Pack Kit
Includes 2 split 49”W x 65”H fiberglass acoustic wall panels covered in choice of fabric. ***This kit must be combined with the Split Panel Bottom-Only 2-Pack Kit to make a full 98”W x 97”H wall section.***

Outside Corner Rail Installation Extrusion
Includes one 96”L outside corner vinyl rail installation extrusion. ***This extrusion must be ordered to connect wall panels that intersect on a 90 degree outside corner.***

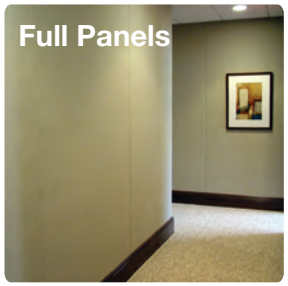

Additional Items Needed For Installation:

- Installation Roller (included with each total order)
- Construction Adhesive
- Spray Adhesive
- Utility Knife
- 5/8” Flat Head Screws
- Tape Measure
- Laser Level
- Circular Saw or Miter Box Saw

STEP 1: Calculate Number of Kits Needed

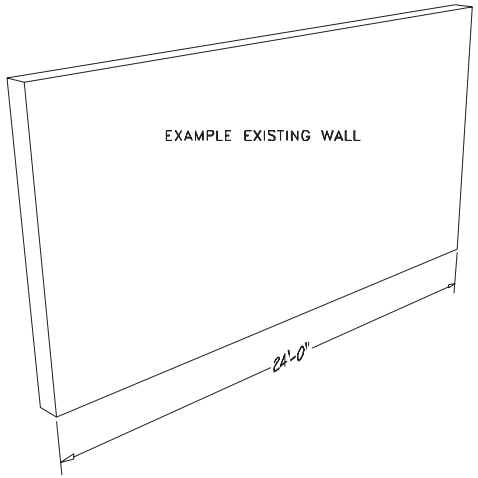

Measure the length (in feet) of each wall being covered.

Add all wall lengths together and divide by 8. The total equals the number of kits needed. Always round up to the next whole number.

Example: 24’ wall ÷ 8 = 3.
A total of 3 Bottom-Only kits AND 3 Top-Only kits are needed to finish this wall.

Installation Instructions

Split Panel Bottom-Only 2-Pack Kit

STEP 2: Mount Polystyrene Strips

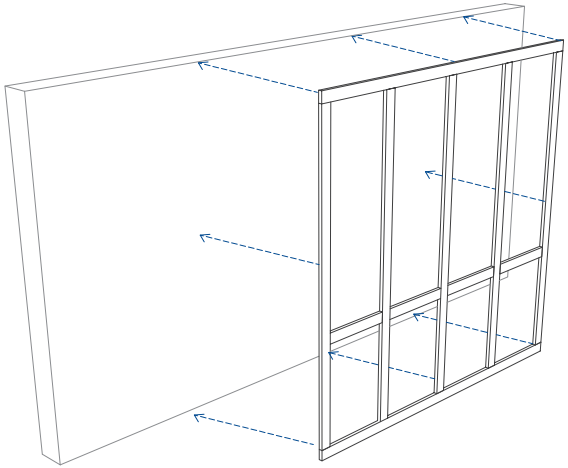

Mount polystyrene strips directly to masonry walls or drywall using construction adhesive at the bottom of the drop ceiling, base of walls, every two feet on center and along the chair rail.

For installation on wood or metal studs, skip to Step 3.

STEP 3: Mount Vinyl Rails

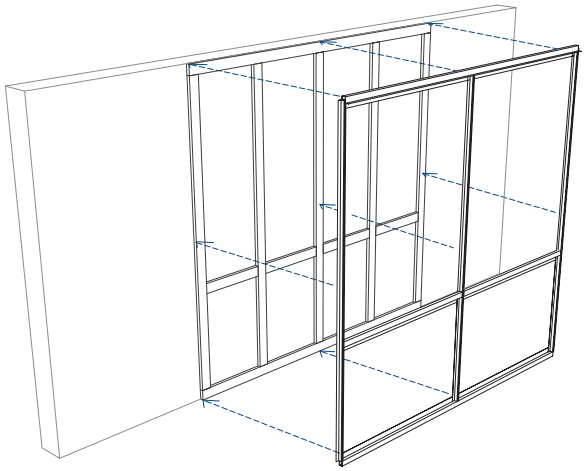

Install vinyl rail extrusions over the polystyrene strips using construction adhesive. Use 5/8" flat head screws to secure rails until adhesive cures.

For installation on wood or metal studs, screw vinyl rail extrusions directly to studs.

STEP 4: Insert Bottom Wall Panels

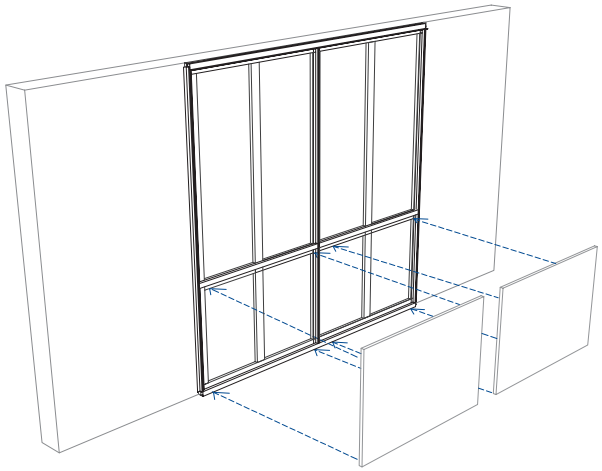

Postion bottom wall panel between the chair rail and the bottom rail.

Must purchase Split Panel Top-Only 2-Pack Kit separately to finish the top section the wall.

STEP 5: Insert Top Wall Panels (sold separately)

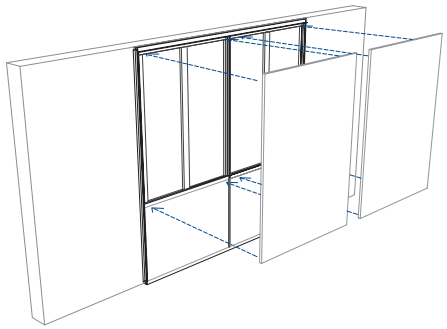

STEP 6: Tuck Fabric and Add Trim (optional)

Once all panels are in place and adhesives have cured, tuck in the fabric edges along the vinyl rails using the installation roller.

Add base board, chair rail and/or crown moulding (not included) to complete your space.

SoftWall FINISHING SYSTEMS™
BY GREAT DAY IMPROVEMENTS, LLC

Sample Finished Space With Split Panels